INR-410

200-Channel 8-Bay Rackmount **Standalone NVR**



- 8-bay Rackmount (2U) with software RAID (0,1)
- Manage up to 200 cameras or video encoders.
- Recording up to 200 Channels
- Live view local up to 16-channel, remote up to 81-channel
- Synchronized playback local up to 9-channel, remote up to 64-channel
- · Export video with RAW and AVI formats
- Event trigger, response and notification
- Mobile Client, Web Client, Workstation
- Location-based management with eMap
- · 200-channel free license included
- Non-ACTi camera support via licensed Camera **Device Pack**


PHOTO INDICATION		
02845678		
1 Power Failure	Power Switch	
2 System Overheat	1 PS/2 Connector	
3 LAN 2	USB Port 2.0 Ports	
4 LAN 1	13 VGA Connector	
5 System Activity	🚯 LAN 1	
6 System Power	15 LAN 2	
7 Reset Buttom	6 HDMI Port	
8 Power Button	USB Port 2.0 Ports	

SOLUTION ARCHITECTURE

18

eSATA Port

DIMENSION DIAGRAM

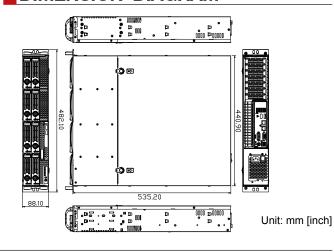

Standalone NVR Camera Site Workstation Remote User 0 e 0 Web Client Remote Standalone Local display Security User NVR Officer 0 Mobile Client Remote

Remote User: Administrator / Supervisor / Manager / Security Officer



9

AC Power Connector

User

Standalone NVR

VIDEO MANGEMENT SYSTEM

INR-410

PRODUCT SPECIFICATION

INR-410

ACTi Standalone Network Video Recorder INR-410 1 local, 3 remote 200 200 Channels H.264, MPEG-4, MJPEG 1920 x1080 Local: 1, 4, 5, 6, 8, 9, 10, 12, 16 Remote: 1, 4, 5, 6, 8, 9, 10, 12, 16, 18, 24, 25, 35, 36, 48, 49, 64, 81 An interface to define display layouts and the pre-set cameras within layout in the public or private view Automatic switch between different views or devices Contains the list of pre-defined views for quick launch Zoom in/out digitally by PiP (Picture-in-Picture) Drag and drop video source from camera tree into display layout; display camera status on the tree Instant recording upon mouse click / Instant snapshot upon mouse click or hot key Display event status upon alarm or upon connection loss or recovery Audio sound from and to all the audio supported devices; audio broadcast to multiple devices at the same time Live view of stream 1 or stream 2 of dual stream devices Instant playback in live view window Area maps with camera icons, small live view windows; hyperlinked Manual switch and auto tour modes selectable e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tours between preset points 32 USB based joystick supported Auto-detect camera's PTZ protocol. Available protocols: ACTi, Pelco-P, Pelco-D, Dynacolor, Visca
200 200 Channels H.264, MPEG-4, MJPEG 1920 x1080 Local: 1, 4, 5, 6, 8, 9, 10, 12, 16 Remote: 1, 4, 5, 6, 8, 9, 10, 12, 16, 18, 24, 25, 35, 36, 48, 49, 64, 81 An interface to define display layouts and the pre-set cameras within layout in the public or private view Automatic switch between different views for quick launch Zoom in/out digitally by PIP (Picture-in-Picture) Drag and drop video source from camera tree into display layout; display camera status on the tree Instant recording upon mouse click / Instant snapshot upon mouse click or hot key Display event status upon alarm or upon connection loss or recovery Audio sound from and to all the audio supported devices; audio broadcast to multiple devices at the same time Live view of stream 1 or stream 2 of dual stream devices Instant playback in live view window Area maps with camera icons, small live view windows; hyperlinked Manual switch and auto tour modes selectable e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tous between preset points 32 USB based joystick supported
200 Channels H.264, MPEG-4, MJPEG 1920 x1080 Local: 1, 4, 5, 6, 8, 9, 10, 12, 16 Remote: 1, 4, 5, 6, 8, 9, 10, 12, 16, 18, 24, 25, 35, 36, 48, 49, 64, 81 An interface to define display layouts and the pre-set cameras within layout in the public or private view Automatic switch between different views or devices Contains the list of pre-defined views for quick launch Zoom in/out digitally by PiP (Picture-in-Picture) Drag and drop video source from camera tree into display layout; display camera status on the tree Instant recording upon mouse click / Instant snapshot upon mouse click or hot key Display event status upon alarm or upon connection loss or recovery Audio sound from and to all the audio supported devices; audio broadcast to multiple devices at the same time Live view of stream 1 or stream 2 of dual stream devices Instant playback in live view window Area maps with camera icons, small live view windows; hyperlinked Manual switch and auto tour modes selectable e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tours between preset points 32 USB based joystick supported
H.264, MPEG-4, MJPEG 1920 x1080 Local: 1, 4, 5, 6, 8, 9, 10, 12, 16 Remote: 1, 4, 5, 6, 8, 9, 10, 12, 16, 18, 24, 25, 35, 36, 48, 49, 64, 81 An interface to define display layouts and the pre-set cameras within layout in the public or private view Automatic switch between different views or devices Contains the list of pre-defined views for quick launch Zoom in/out digitally by PIP (Picture-in-Picture) Drag and drop video source from camera tree into display layout; display camera status on the tree Instant recording upon mouse click / Instant snapshot upon mouse click or hot key Display event status upon alarm or upon connection loss or recovery Audio sound from and to all the audio supported devices; audio broadcast to multiple devices at the same time Live view of stream 1 or stream 2 of dual stream devices Instant playback in live view windows Area maps with camera icons, small live view windows; hyperlinked Manual switch and auto tour modes selectable e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tours between preset points 32 USB based joystick supported
1920 x1080 Local: 1, 4, 5, 6, 8, 9, 10, 12, 16 Remote: 1, 4, 5, 6, 8, 9, 10, 12, 16, 18, 24, 25, 35, 36, 48, 49, 64, 81 An interface to define display layouts and the pre-set cameras within layout in the public or private view Automatic switch between different views or devices Contains the list of pre-defined views for quick launch Zoom in/out digitally by PiP (Picture-in-Picture) Drag and drop video source from camera tree into display layout; display camera status on the tree Instant recording upon mouse click / Instant snapshot upon mouse click or hot key Display event status upon alarm or upon connection loss or recovery Audio sound from and to all the audio supported devices; audio broadcast to multiple devices at the same time Live view of stream 1 or stream 2 of dual stream devices Instant playback in live view window Area maps with camera icons, small live view windows; hyperlinked Manual switch and auto tour modes selectable e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Streate preset points; create auto tours between preset points Streate preset points; create auto tours between pres
Local: 1, 4, 5, 6, 8, 9, 10, 12, 16 Remote: 1, 4, 5, 6, 8, 9, 10, 12, 16, 18, 24, 25, 35, 36, 48, 49, 64, 81 An interface to define display layouts and the pre-set cameras within layout in the public or private view Automatic switch between different views or devices Contains the list of pre-defined views for quick launch Zoom in/out digitally by PiP (Picture-in-Picture) Drag and drop video source from camera tree into display layout; display camera status on the tree Instant recording upon mouse click / Instant snapshot upon mouse click or hot key Display event status upon alarm or upon connection loss or recovery Audio sound from and to all the audio supported devices; audio broadcast to multiple devices at the same time Live view of stream 1 or stream 2 of dual stream devices Instant playback in live view window Area maps with camera icons, small live view windows; hyperlinked Manual switch and auto tour modes selectable e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tours between preset points 32 USB based joystick supported
Remote: 1, 4, 5, 6, 8, 9, 10, 12, 16, 18, 24, 25, 35, 36, 48, 49, 64, 81 An interface to define display layouts and the pre-set cameras within layout in the public or private view Automatic switch between different views or devices Contains the list of pre-defined views for quick launch Zoom in/out digitally by PiP (Picture-in-Picture) Drag and drop video source from camera tree into display layout; display camera status on the tree Instant recording upon mouse click / Instant snapshot upon mouse click or hot key Display event status upon alarm or upon connection loss or recovery Audio sound from and to all the audio supported devices; audio broadcast to multiple devices at the same time Live view of stream 1 or stream 2 of dual stream devices Instant playback in live view window Area maps with camera icons, small live view windows; hyperlinked Manual switch and auto tour modes selectable e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tours between preset points 32 USB based joystick supported
Remote: 1, 4, 5, 6, 8, 9, 10, 12, 16, 18, 24, 25, 35, 36, 48, 49, 64, 81 An interface to define display layouts and the pre-set cameras within layout in the public or private view Automatic switch between different views or devices Contains the list of pre-defined views for quick launch Zoom in/out digitally by PiP (Picture-in-Picture) Drag and drop video source from camera tree into display layout; display camera status on the tree Instant recording upon mouse click / Instant snapshot upon mouse click or hot key Display event status upon alarm or upon connection loss or recovery Audio sound from and to all the audio supported devices; audio broadcast to multiple devices at the same time Live view of stream 1 or stream 2 of dual stream devices Instant playback in live view window Area maps with camera icons, small live view windows; hyperlinked Manual switch and auto tour modes selectable e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tours between preset points 32 USB based joystick supported
An interface to define display layouts and the pre-set cameras within layout in the public or private view Automatic switch between different views or devices Contains the list of pre-defined views for quick launch Zoom in/out digitally by PiP (Picture-in-Picture) Drag and drop video source from camera tree into display layout; display camera status on the tree Instant recording upon mouse click / Instant snapshot upon mouse click or hot key Display event status upon alarm or upon connection loss or recovery Audio sound from and to all the audio supported devices; audio broadcast to multiple devices at the same time Live view of stream 1 or stream 2 of dual stream devices Instant playback in live view window Area maps with camera icons, small live view windows; hyperlinked Manual switch and auto tour modes selectable e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Create preset points; create auto tours between preset points 32 USB based joystick supported
Automatic switch between different views or devices Contains the list of pre-defined views for quick launch Zoom in/out digitally by PiP (Picture-in-Picture) Drag and drop video source from camera tree into display layout; display camera status on the tree Instant recording upon mouse click / Instant snapshot upon mouse click or hot key Display event status upon alarm or upon connection loss or recovery Audio sound from and to all the audio supported devices; audio broadcast to multiple devices at the same time Live view of stream 1 or stream 2 of dual stream devices Instant playback in live view window Area maps with camera icons, small live view windows; hyperlinked Manual switch and auto tour modes selectable e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tours between preset points 32
Zoom in/out digitally by PiP (Picture-in-Picture) Drag and drop video source from camera tree into display layout; display camera status on the tree Instant recording upon mouse click / Instant snapshot upon mouse click or hot key Display event status upon alarm or upon connection loss or recovery Audio sound from and to all the audio supported devices; audio broadcast to multiple devices at the same time Live view of stream 1 or stream 2 of dual stream devices Instant playback in live view window Area maps with camera icons, small live view windows; hyperlinked Manual switch and auto tour modes selectable e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tours between preset points 32 USB based joystick supported
Drag and drop video source from camera tree into display layout; display camera status on the tree Instant recording upon mouse click / Instant snapshot upon mouse click or hot key Display event status upon alarm or upon connection loss or recovery Audio sound from and to all the audio supported devices; audio broadcast to multiple devices at the same time Live view of stream 1 or stream 2 of dual stream devices Instant playback in live view window Area maps with camera icons, small live view windows; hyperlinked Manual switch and auto tour modes selectable e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tours between preset points 32 USB based joystick supported
Instant recording upon mouse click / Instant snapshot upon mouse click or hot key Display event status upon alarm or upon connection loss or recovery Audio sound from and to all the audio supported devices; audio broadcast to multiple devices at the same time Live view of stream 1 or stream 2 of dual stream devices Instant playback in live view window Area maps with camera icons, small live view windows; hyperlinked Manual switch and auto tour modes selectable e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tours between preset points 32 USB based joystick supported
Display event status upon alarm or upon connection loss or recovery Audio sound from and to all the audio supported devices; audio broadcast to multiple devices at the same time Live view of stream 1 or stream 2 of dual stream devices Instant playback in live view window Area maps with camera icons, small live view windows; hyperlinked Manual switch and auto tour modes selectable e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tours between preset points 32 USB based joystick supported
Audio sound from and to all the audio supported devices; audio broadcast to multiple devices at the same time Live view of stream 1 or stream 2 of dual stream devices Instant playback in live view window Area maps with camera icons, small live view windows; hyperlinked Manual switch and auto tour modes selectable e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tours between preset points 32 USB based joystick supported
Live view of stream 1 or stream 2 of dual stream devices Instant playback in live view window Area maps with camera icons, small live view windows; hyperlinked Manual switch and auto tour modes selectable e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tours between preset points 32 USB based joystick supported
Instant playback in live view window Area maps with camera icons, small live view windows; hyperlinked Manual switch and auto tour modes selectable e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tours between preset points 32 USB based joystick supported
Area maps with camera icons, small live view windows; hyperlinked Manual switch and auto tour modes selectable e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tours between preset points 32 USB based joystick supported
Manual switch and auto tour modes selectable e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tours between preset points 32 USB based joystick supported
Manual switch and auto tour modes selectable e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tours between preset points 32 USB based joystick supported
e-Map image upload; camera positioning; map linking Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tours between preset points 32 USB based joystick supported
Mouse PTZ mode to control e-Map video streams Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tours between preset points 32 USB based joystick supported
Pan, tilt and zoom controls; speed control; both buttons and mouse controls Create preset points; create auto tours between preset points 32 USB based joystick supported
Create preset points; create auto tours between preset points 32 USB based joystick supported
Create preset points; create auto tours between preset points 32 USB based joystick supported
Create preset points; create auto tours between preset points 32 USB based joystick supported
32 USB based joystick supported
Maximum total bitrate 300 Mbps
Example: 200 Channels: 1MP, 15fps, H.264, 1.5Mbps 150 Channels: 2MP, 15fps, H.264, 2Mbps 100 Channels: 2MP, 30fps, H.264, 3Mbps 75 Channels: 5MP, 15fps, H.264, 4Mbps
Record video with user defined schedule
Record video when the alarm event is triggered, including the pre-event buffered video clip
Different recording frame rate settings for non-event and triggered event
Instant recording upon mouse click
Recording of stream 1 or stream 2 of dual stream devices
Max 6000 fps total; Max 30 fps per camera
wax ooo ips total, wax oo ips per callera
Coricl ATA
Seagate 500GB 3.5" SATA HDD
8 (1 bay is occupied by system HDD)
Software RAID 0, 1
eSATA, iSCSi, USB mass storage (USB 2.0)
Search video recordings by time or channel
Search alarm triggered video recordings
Continuous forward and backward playback with speeds 1x/2x/4x/8x or frame-by-frame; pause; stop
Up to 9 channels for local display; up to 64 channels for remote client
Instant snapshot from playback upon mouse click
Zoom in/out digitally by PiP (Picture-in-Picture)
Crop a short video clip from long recording file and save it as an independent file
Export video clips in AVI or RAW format; text overlay supported
Expert these sings in the for the terminal, lost overlay supported
Video motion dotestion: Dessive ID concert External device the such disited insult Video lace as the such
Video motion detection; Passive IR sensor; External device through digital input; Video loss and recovery; Network loss and recovery; Server loss and recovery; Disk full; Disk not found
Record video; Pop-up window with live video; Switch to hotspot window; Play beep sound; Activate external device through digital output; Upload snapshot to FTP server; Execute system command to activate other programs; E-mail notification with snapshots; Command a PTZ device to go to a preset point
Manually activate external devices through digital output via live view monitor
Define the schedule of event manager
Poulle the solicotie of event manager
are subject to change without notice.
a

INR-410

Standalone NVR

System	
Permission Control	Multi-group/users, liveview/playback/setup/remote level permission
Operating System	Windows Embedded Standard 7
Language	Multi-language support
Remote Access	
PC Client Program	User interface program (Workstation) with live view, PTZ, playback, e-Map, event management, setup
PC Web Browser	Microsoft Internet Explorer 8.0, 9.0 or 10.0 with live view, PTZ, playback, event management, setup
Mobile Client Program	Mobile device application (Active Mobile Client) supports live view, PTZ control, event or time based search and playback Supported devices: iPhone, iPad, iTouch and Android device
Remote Client PC System Requirement	1-16 channels: Intel Core 2 Quad 2.4GHz, 4GB RAM 17-81 channels: Intel Core i7-920 2.67 GHz, 4GB RAM
Hardware	
CPU	Intel Processor
RAM	8GB
Dimensions (W x H x D)	889 mm x 437 mm x 5334 mm (3.5" x 17.2" x 21")
Weight	11.42kg (with HDD*1 & front bezel)
Operating Temperature	0°C~ 40°C (32°F ~ 104°F)
Operating Humidity	10% ~ 85% RH
Power Source / Consumption	110V~220V AC 50/60Hz / 85 W
Approvals	CE (EN 55022 Class B, EN 55024), FCC (Part15 Subpart B Class B)
USB	USB 2.0, 8 ports (2 front ports, 6 rear ports)
Ethernet Port	2, Gigabit Ethernet ports (1000 Base-T), RJ-45 connector
eSATA Port	2
Display port	2 HDMI, 1 VGA
 Integration 	
Unified Solution	Fully compatible with ACTi cameras, encoders and CMS2.0